

FP-08800 FirePro Test Simulator

Indicators - The simulator has a single indicator light. The unit has a latching indicator – will stay illuminated until reset.

Pressing **the Test/Reset button** will reset the simulator, and will illuminate the light to show that the unit and internal battery is operating properly. The simulator should be reset after each test is performed.



FirePro Test Simulator can be used with the following:

Sigma XT	Aust. Standard Fire Panels	FP-08917	Local Application System
FP-08450	Marine Control Panel		
FP-08451	Vehicle AS 5062 Panel.	FP-C2	Sub-Panel or local protection solutions
FP-08100	NON-Monitored Control Panel	FP-C4	Local Application System

FP-08810 Inline Voltage Meter



FP-08450 and FP-08451 Control panels has power supply limitations. They require minimum 9vDC to operated normally, this meter can be easily plugged into the power supply circuit, providing easy to read voltage measurement.



FP-08811 Car Plug in – Testing Power Supply

When power from main supply is unavailable and system testing is required this lead can be plugged into car and provide 12vDC to panel. Comes with 20m Cable, and has inbuilt 5A fuse.

