
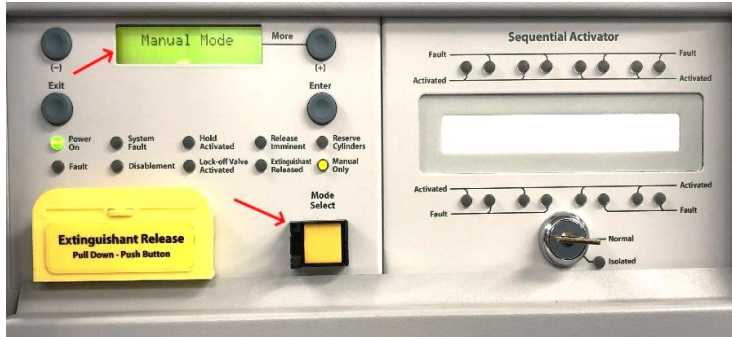


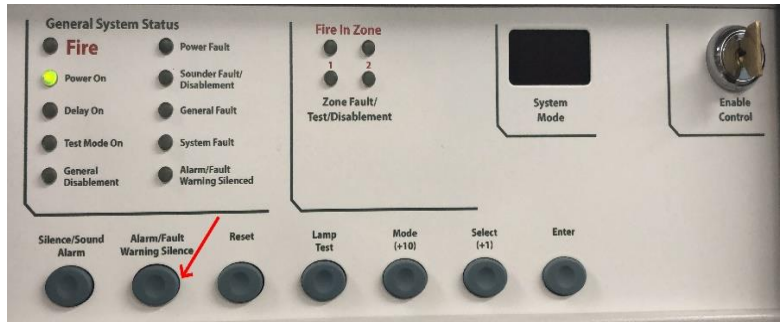



Incorrect use of the Fire Indicator Panel can cause accidental activation of the Suppression System. If in doubt ask for assistance


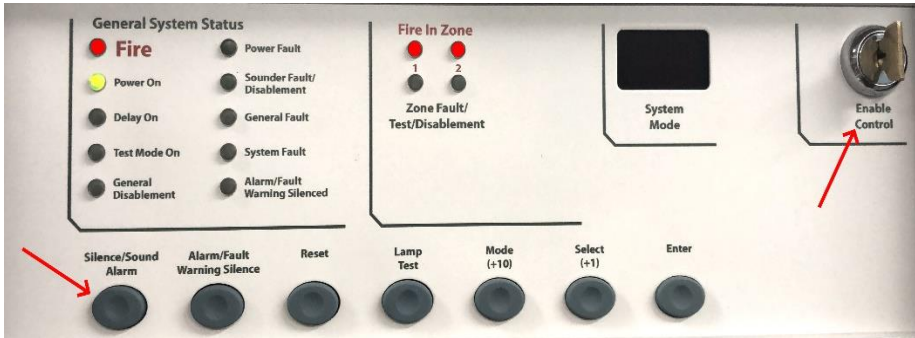
SUPPRESSION SYSTEM ISOLATION

		
<p>Open clear Perspex door</p>	<p>Press the Yellow Mode Switch. This will prevent the disable the automatic activation of the system, The Manual Release Switches will still work.</p>	<p>In Manual Mode the display on the FIP changes to “Manual Mode” and the System Inoperative sign will be lit.</p>

FAULT ACTIVATION – to Silence Buzzer for Faults

		
<p>Open clear Perspex door</p>	<p>Press the Silence/sound alarm button The System Inoperative Sign will be lit, and fault will clear only when system has been Corrected</p>	

ALARM ACTIVATION - To silence alarm after activation:

		
<p>Open clear Perspex door</p>	<p>Insert key into Key Switch in top right hand corner and turn to the right. Press the Silence/sound alarm button..</p>	

IMPORTANT

Any faults on the Fire Indicator Panel should be reported to your supplier. Any work outside what has been described here (including servicing/maintenance and fault finding) must be performed by trained service technicians. Any misuse or tampering with the Fire Control Panel may cause damage to the circuit board or may discharge the fire suppression system.