



- Notes :
1. Fire Indicator Panel - Sigma XT Conventional - 2 Detection Zones - M3 Cabinet
 2. Power to FIP 230v AC
 3. Sigma XT reverts back to Ampac ZS4 FIP which has existing i
 4. Auto-Dialer Model S270
 5. Auto-Dialer is located within the Sigma XT FIP Cabinet.
 6. Auto-Dialer is connected only to Sigma XT Panel for Fire & Fault signals.

	FIRE ALARM		RELAY FOR AC SHUTDOWN		SIGN - FIRE ALARM / DNE
	SIREN / STROBE		FIREPRO GENERATOR - 1200g		SIGN - SYSTEM INOPERATIVE
	90°C & RoR THERMAL DETECTOR		FIREPRO GENERATOR - 2000g		SIGN - FIRE ALARM / EVAC AREA
	PHOTO ELECTRIC SMOKE DETECTOR		FIREPRO GENERATOR - 3000g		AUTO DIALER
	TEMPERATURE & HUMIDITY SENSOR		FIREPRO GENERATOR - 5700g		AIR CONDITIONER

FIRE SAFETY EQUIPMENT PTY LTD		
Drawn By PM	Title HENDERSON Exchange	Drawing No TS-H1
Date 02-05-19		